

Installation Guide for self-ballast LED Tube

Please take the time to read this quick installation guide. The guide contains important information and notes regarding installation and operation.

Instructions for self-ballast led tubes


1. Switch off power;
2. Remove fluorescent tube;
3. For lamp holder with magnetic ballast: Remove the starter;
For lamp holder with electronic ballast: Bypass the ballast;
4. Install LED tube;
5. Switch on power;

Installation Diagram


Dual - End Power




1. LED lamp holder without ballast

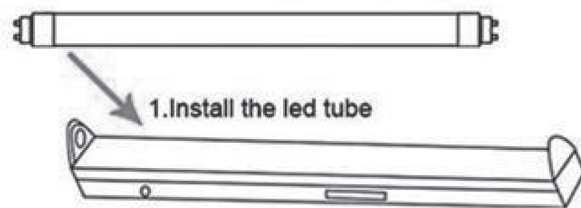

2. Lamp holder with magnetic ballast / inductive ballast and starter

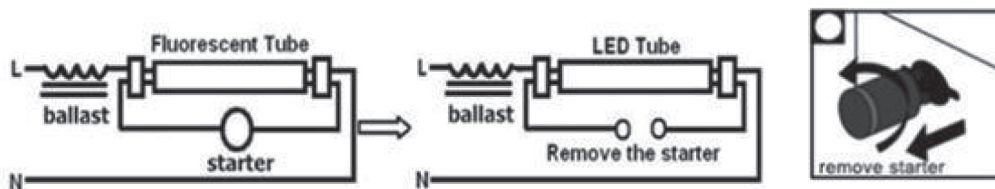

3. Lamp holder with electronic ballast

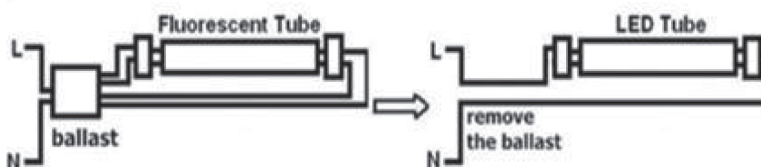

Warnings

This product is self-ballast led tube, working without ballast.

Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaries' electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

Risk of fire or electric shock. Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaries.

Not for use with dimmers.